


## INPUT / OUTPUT

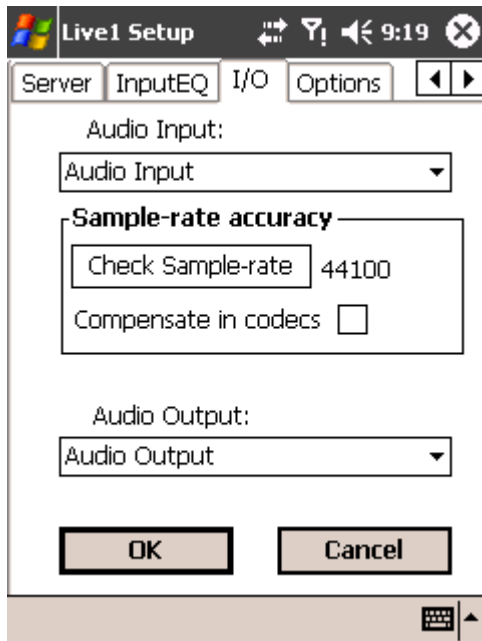

START SETUP IN YOUR PROGRAMS FOLDER

### Select page I / O

The I/O (Input / Output) tab enables you to setup the audio input and output.

### EXPLANATORY FIELDS AND BUTTONS

#### Audio Input

Choose the input you want to use from the drop-down menu.

#### Sample-rate accuracy

Many PDA's have a sample-rate that is not as accurate as one likes it to be. With this option you have the ability to measure the exact sample-rate of your PDA and let Luci compensate for this inaccuracy. To measure, press the button 'Check sample-rate' and wait until the counter is 0 . You will see the real sample-rate of your PDA appearing to the right of the button. 44100 is the value it is supposed to be. Some PDA's have a sample-rate that is even as high as 44300 . Mark the box 'Compensate in codecs' to let Luci compensate for any inaccuracy encountered in the sample-rate.

#### Audio Output

Choose the output you want to use from the drop-down menu.

Go to adjust the next page or press OK to save and leave Setup.